

WATER DISPENSERS

Model:



V208 XST





VERY IMPORTANT!
PLEASE READ CAREFULLY BEFORE USE

USER MANUAL

1、Parts name

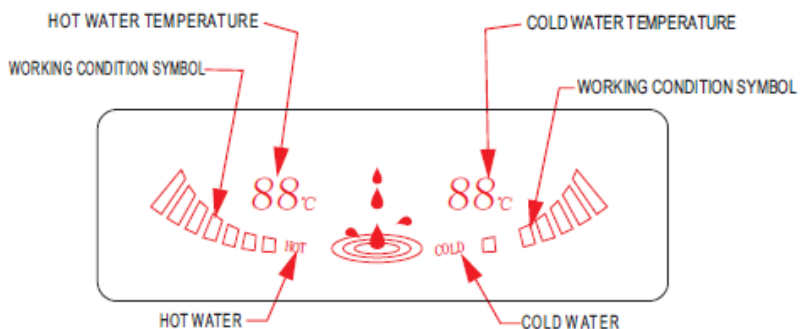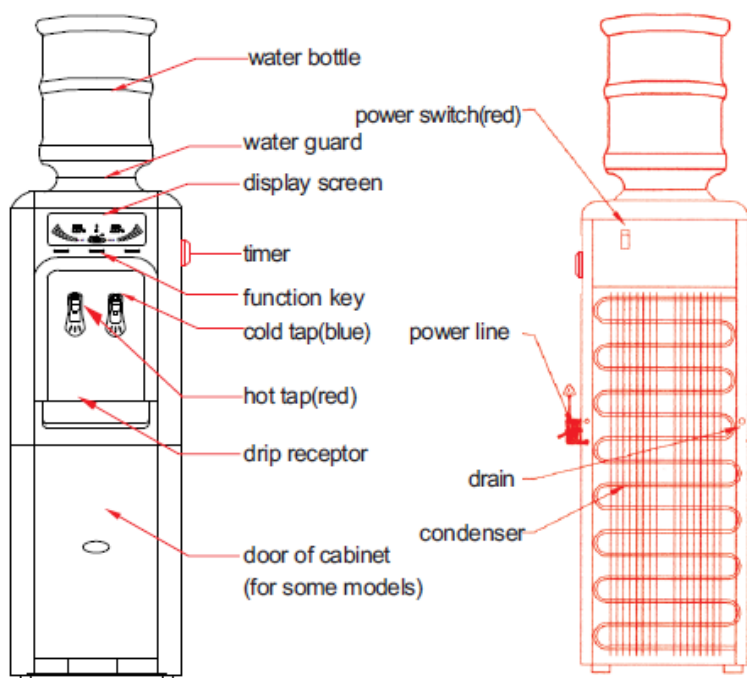

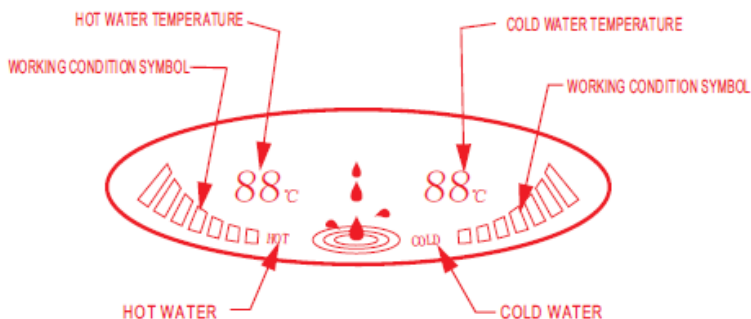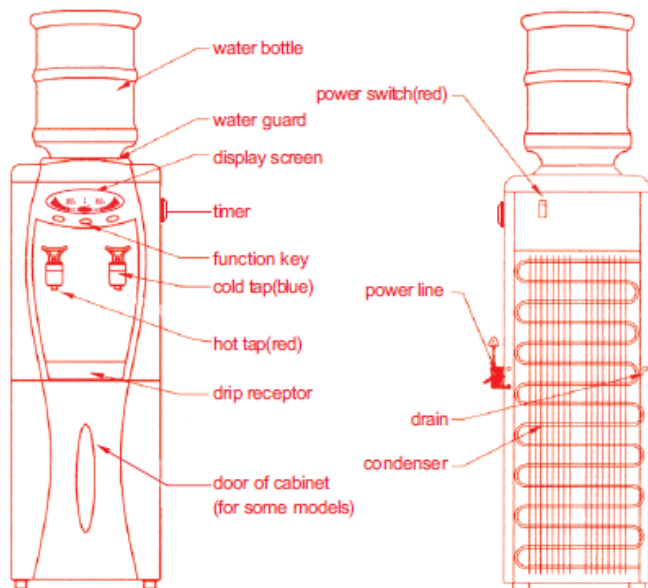

(This is a basic graph, just for reference)

2、FEATURES

It supplies 35°C~94°C(inside heating)or 35°C~90°C(outside heating) hot water and 5°C 15°C cold water to meet the demands of people for drinking coffee or tea and having instant food or milk,etc.It's suitable for household,hotels,offices and schools,etc.Three or five gallons bottle with pure water or Ro-purified water can be used as the water source.

The dispenser is adopted the technology of advanced microcomputer control, powerful compressor refrigeration and electric heating. The temperature controller works efficiently and the dispenser is fast cooling and high efficiency.

The LED indicates working conditions of the dispenser and it's easier to clear display than the VFD and LCD.

As to this,it is very convenient for customers to use the dispenser.

The cooling and heating tank are made of food grade stainless steel, they are long-use, safe and sanitary.

The high efficient ozone generator is adopted in the disinfection cabinet of its bottom, the bacteria can be killed and food can be kept fresh for a long time.

3、PLACEMENT

1.The unit should be placed flatly.

2.It is necessary to place the dispenser in cool shade, keep it away from direct sunlight and maintain its distance more than 15cm from the wall. there will be a distance of 15cm in the left and right side.

3.In order to use safely, please fix the machine on the fixity by this staff.

4. It is recommended to put this machine away from the furniture and other appliances to avoid unexpected damage by water.

5.After the above mentioned steps then put the switches at off side.


6.To avoid a hazard due to than instability of the appliance ,it must be fixed in accordance with the instructions.

7.In the back of water dispenser there is a fixing sheet, consumers should connect the fixing sheet with the wall or unmoved object by themselves,in order to avoid it fall down.

8. WARNING - Keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.

9.WARNING - Do not damage the refrigerant circuit.

10.WARNING - Do not use flammable appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

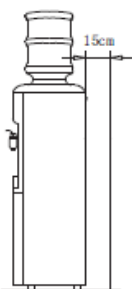

4、USING METHODS

1、PREPARATION



1. REMOVE THE LABEL ON THE CAPSULE



2. INSERT THE WATER BOTTLE INTO THE WATER INLET ON THE TOP OF THE UNIT



3. PRESS THE RED AND BLUE FAUCETS TO ENSURE WATER IS FLOWING


2、STARTING UP



1. SWITCH ON THE SOURCE



2. TURN ON THE SWITCH

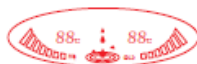

3. BRAND NAME TWINKING, WATER TEMPERATURE SHOW "00"

3、HEATING



PUSH THE "HEATING" KEY



THE HOT WATER SYMBOL WILL LIGHT UP



LIGHT FROM LEFT TO RIGHT (ALWAYS LIGHT WHEN KEEP WARMING)

4、REFRIGERATION



PUSH THE "COOLING" KEY




THE COLD WATER SYMBOL WILL LIGHT UP



LIGHT UP IN ACCORDANCE WITH CLOCK WISE (ALWAYS LIGHT WHEN KEEP WARMING)

5、DISINFECTION (PRESERVATION)

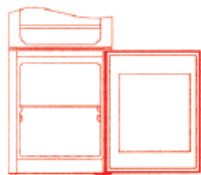

1.PUT THE GOODS YOU WANT STERILIZED OR PRESERVED INTO THE CABINET. PLEASE NOTE CLOSE THE DOOR TIGHTLY.



2.ADJUST THE PRESERVED TIME IN ACCORDANCE WITH REQUIRE. IT WILL STOP WHEN THE TIME IS UP.

6、THE INSTALLATION OF WATER TEMPERATURE



PUSH THE "INSTALL" KEY



THE HOT WATER TEMPERATURE SYMBOL BEGIN TO TWINKING



THE TEMPERATURE RISE 1 CELSIUS DEGREE




THE TEMPERATURE FALL 1 CELSIUS DEGREE

PUSH THE "HEATING" "COOLING" KEY

THE TEMPERATURE RISE 1 CELSIUS DEGREE
THE TEMPERATURE FALL 1 CELSIUS DEGREE



PUSH THE "HEATING" "COOLING" KEY

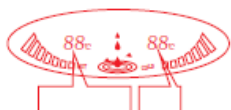


THE COLD WATER TEMPERATURE SYMBOL BEGIN TO TWINKING



PUSH THE "INSTALL" KEY AGAIN



PUSH THE "INSTALL" KEY AGAIN

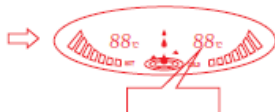

AFTER ADJUSTMENT, THE HOT&COLD WATER TEMPERATURE SYMBOL WILL SHOW THE CORRECT WATER TEMPERATURE.

7、STOP

IF YOU WANT SHUT OFF THE HEATING AND COOLING FUNCTION, PUSH THE "HEATING" AND "COOLING" KEY IN TURN ABOUT THREE SECONDS, THE SYSTEM WILL CLOSE AUTOMATICALLY.

5、 HOW TO USE THE DISINFECTION CABINET

- 1.The water on the goods should be cleaned before put these goods into cabinet.
- 2.Please close the door TIGHTLY then turn the timer (0-30 minutes optional) to start the ozone generator.Don't open the door and keep close for 1 hour to avoid ozone leakage.It will refuse to work if the door isn't closed tightly.
- 3.It's necessary to clean the cabinet termly.

6、 HOW TO USE THE COOLING CABINET

- 1.You must clean and dry the cabinet before use.And put the sponge bar in the cabinet,then close the door TIGHTLY.
- 2.Please don't put any goods in the cabinet for 2 hours running when the first use.Then put the goods in the cooling cabinet.(Please leave space for air circulation if you put the hot food in it.)
- 3.It is necessary to dry the sponge and then put it back periodically.

7、 ATTENTION

- 1.Danger: Don't pull the power wire constrainedly.Don't pull or push the plug to start or stop the machine.Don't change the power cord set random.
- 2.CAUTION:Make sure adopt the ground wire with three pin-hole socket and electric leakage protection to avoid any electric shock.
- 3.Don't clean the machine with water to avoid unexpected electric shock.
You should clean it by soft cloth.
- 4.Adopt the proper wire and socket to avoid wire overheating. Meanwhile, adopt the earth wire and the electric protector to avoid any electric shock.
- 5.Children are forbidden to push or pull the hot (red) water tap.
- 6.Give this machine a dry, clean and shade place.
- 7.Don't move it roughly.Don't incline it over 45°.

8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. The product is for household use only.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.

8、 HOW TO CLEAN YOUR MACHINE

1. When you first use, please switch off the machine and pull out the bottle then drain out the water from drain stopple (be careful of hot water) after 30 minutes running. Then put back the bottle and open the hot tap until water comes out.
2. If you use mineral water, it's necessary to clean the heating coil and tank with 2% cooking citric acid and clean water once a month to assure good performance and good water quality. The clean method is same to the above mentioned in clause 1. (Please note: You should clean again by pure water after drain out the citric water.)
3. The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.
4. The warranty only covers defects in material or workmanship.
5. The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.
6. The warranty will not apply in cases of:
 - Normal wear and tear
 - Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
 - Use of force, damage caused by external influences

- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

9、 SYMPTOMS AND REMEDY

Symptoms	Possible causes	Remedy
No water from the faucets	Air entrance has been blocked	Take down the bottle and reassemble it
Do not provide hot or cold water	1. Too much water has been used in a short time 2. Electric connection is loose	1. Wait for a while and try again. 2. Make sure the switch is ON and the plug is in the socket
Electrical leakage	The connection is not good	Make sure the earth wire and the leakage protector are available
Loud noise	Incorrect placement	Replace it away from other objects
Water leakage	The bottle is broken	Change a good one
The sterilizer doesn't work	Door switch cuts out	Close the door tightly
The cooling cabinet doesn't work	Door opens	Close the door tightly

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

10、 Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.